

# PRIMED

Style Number: PRD00003 6x4 Instant Goal

---



To avoid injury during assembly, disassembly, use, adjustment and/or movement of the PRIMED 6x4 Instant Goal, the following warnings MUST be observed at all times:

- Adult assembly (1 adults) required for assembly, disassembly, adjusting and moving the 6x4 Instant Goal.
- Adult supervision during use is recommended.
- Extreme caution should ALWAYS be exercised when assembling, disassembling, using, adjusting, moving or locating the PRIMED 6x4 Instant Goal. Children under the age of 12 should not move trainer or handle steel ground stakes.
- WARNING: NEVER climb on or hang from the PRIMED 6x4 Instant Goal.
- The PRIMED 6x4 Instant Goal should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
- Do not leave the PRIMED 6x4 Instant Goal outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds.
- To extend the life of the product, unit should be cleaned and stored indoors when not in use.
- Ensure all components are properly assembled prior to use. Examine your PRIMED 6x4 Instant Goal regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
- Keep away from fire and heat sources.



## WARNING:

**CHOKING HAZARD--Small parts  
Not for children under 3 yrs.**

- Unassembled parts may be a choking hazard for children 3 years and younger. Adult assembly is required.
- Children should not put arms, head or other body parts in holes in rebounder or net. Entrapment and/or strangulation can occur.
- Failure to follow the above mentioned Warnings may result in serious injury.

**CAUTION: Goal is under tension. Exercise caution when opening and folding.**

# PRiMED

## Style Number: PRD00003 6x4 Instant Goal

---

6x4 Instant Goal is completely assembled when purchased. It is important that user uses following steps for putting up and folding the goal.

Please follow following steps to putting up the goal:

1. Take the goal out of the bag and hold it per below picture.



2. Throw the goal into an open area in front of you per below picture.



3. Adjust the goal per below picture for proper use.



# PRiMED

## Style Number: PRD00003 6x4 Instant Goal

---

6x4 instant Goal can be folded twice. Please follow the following pictures steps to fold the goal.

1. Take the goal per below pictures and fold it into figure "8".



Hold above, folded once, goal and twist it into figure "8" per below pictures.



2. Bend the figure "8" into a circle using your arm and waist per below pictures.



3. Put the strap on the goal per below pictures to prevent the goal from pop open.



4. Put the goal back into the bag for storage.



## Limited Warranty

### Limited Warranty

#### **Limited Warranty**

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the Company.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS LIMITED WARRANTY, DICK'S SPORTING GOODS, INC. MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCT.

#### **Material Covered**

Except as detailed below, this Limited Warranty covers defects in materials and workmanship. This Limited Warranty is void if the Product is:

- ° Damaged through improper use, negligence, abuse, misuse, transportation, damage, acts of nature, or accident, to include failure to follow the assembly and or operating instructions supplied with the product.
- ° Used in commercial or rental applications.
- ° Modified or repaired by anyone not authorized by the Company.

#### **Material Not Covered**

This Limited Warranty does not cover expendable items including but not limited to: Batteries, light bulbs, fuses, accessories, and other items that experience wear as a result of normal use.

#### **Terms of Coverage**

If during the one year LIMITED WARRANTY period, the Company deems any part or component of the Product to be defective, the Company will repair the Product without charge, or at the option of the Company, will replace the Product with new product, either the same or an equivalent item.

The Company's liability is limited to the repair or replacement, at its option of any defective product.

**THE COMPANY ASSUMES NO RESPONSIBILITY NOR LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND.**

**THIS LIMITED WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS OTHERWISE PROVIDED BY APPLICABLE LAW.**

Please direct all Product inquiries to:

Dick's Sporting Goods, Inc.  
345 Court Street  
Coraopolis, PA 15108  
Customer Service  
1 866 677 4771  
customer.service@dcs.com