


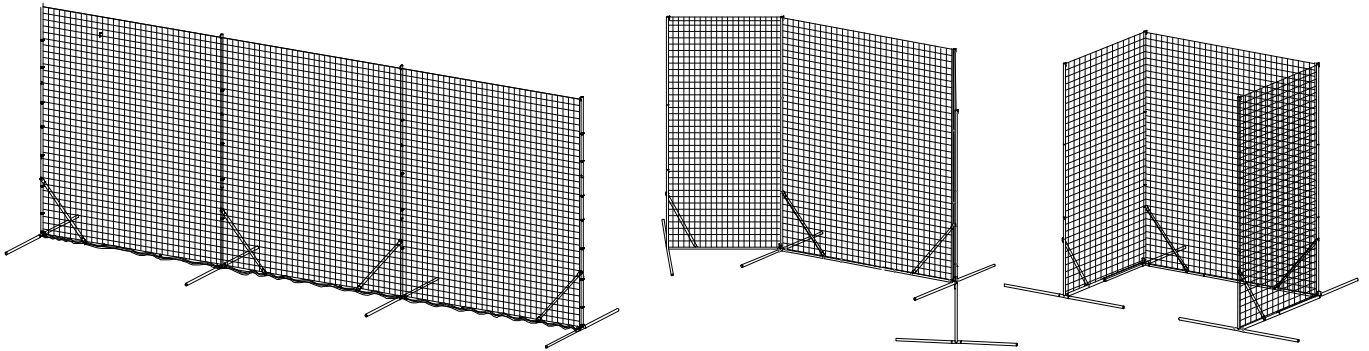

Style Number: PRD00205 10'x30' Backstop



WARNING!

To avoid injury during assembly, disassembly, use, adjustment and/or location of the PRIMED Backstop, please observe the following WARNINGS:

- Two competent adults are required to assemble, disassemble, and adjust the PRIMED Backstop.
- Extreme caution and appropriate judgment should ALWAYS be exercised when assembling, disassembling, using, or adjusting the PRIMED Backstop.
- NEVER climb on or hang from the PRIMED Backstop.
- ALWAYS anchor the PRIMED Backstop as instructed prior to use. An unsecured backstop can cause serious injury.
- The PRIMED Backstop should be placed on a flat surface that is suitable for play while ensuring maximum user safety.
- Do not leave the PRIMED Backstop outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit.
- Ensure all components are properly assembled prior to use.
- Examine your PRIMED Backstop regularly for wear and tear. Discontinue use immediately if any defect is found.
- Keep away from fire and heat sources.
- **CHOKING HAZARD!** Unassembled parts may be a choking hazard for children 3 years and younger. Adult assembly and supervision is required.
- Failure to follow the above mentioned Warnings may result in injury.

PRIMED

Style Number: PRD00205 10'x30' Backstop


BEFORE ASSEMBLY:

- Work on a smooth and flat surface.
- Lay out all components so they are in easy reach.
- Read assembly instructions completely to familiarize yourself with the components.

PACKAGE CONTENTS

PART NO.	DESCRIPTION	10'x 6'x 6'	
		SPEC/DIMENSION	QTY
1	Upper Pole	41"	4
2	Connecting Pole	41"	7
3	Left Lower Pole	43 ¹ / ₂ "	1
4	Right Lower Pole	43 ¹ / ₂ "	1
5	Left Base Pole	41"	1
6	Supporting Pole	41"	4
7	Base Side Pole	41"	8
8	Base Pole	41"	4
9	Mid-Lower Pole	43 ¹ / ₂ "	1
10	Ground J-Hook	---	8
11	Round End Cap ϕ 32	---	12
12	Net w/Net Ties	---	1
13	Butterfly Nut and Bolt set (M6 and M6*50)	---	8
14	Left Base Pole	43 ¹ / ₂ "	1
15	Right Base Pole	41"	1
16	L Pin		2


DIAGRAMS FOR PARTS

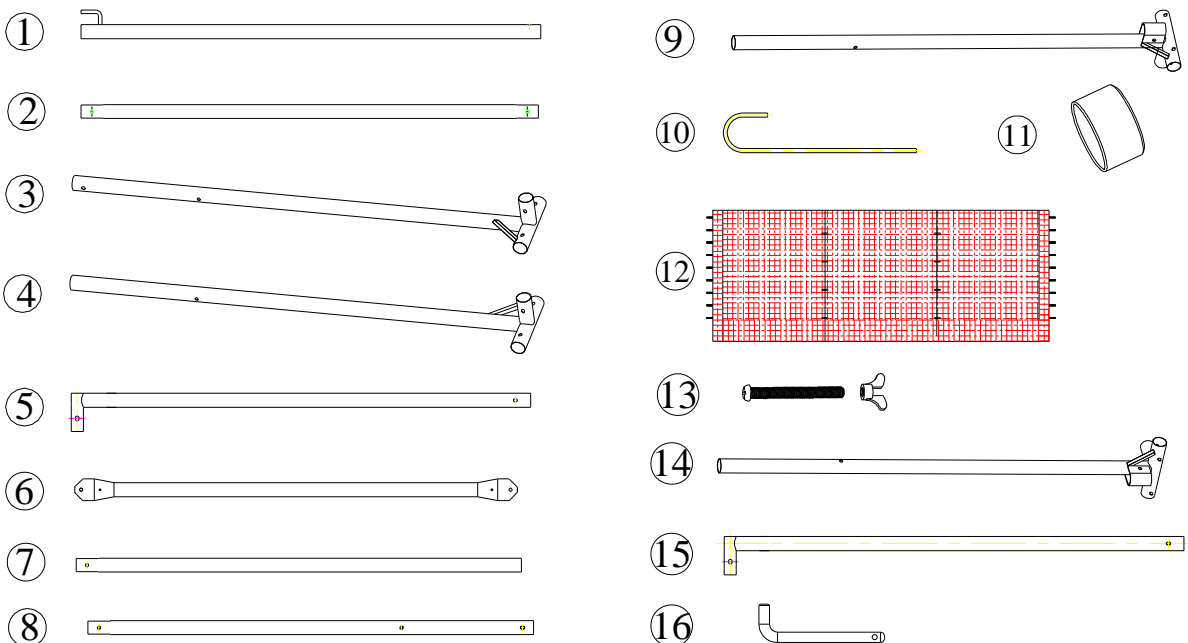



Style Number: PRD00205 10'x30' Backstop

ASSEMBLING THE BACKSTOP NET

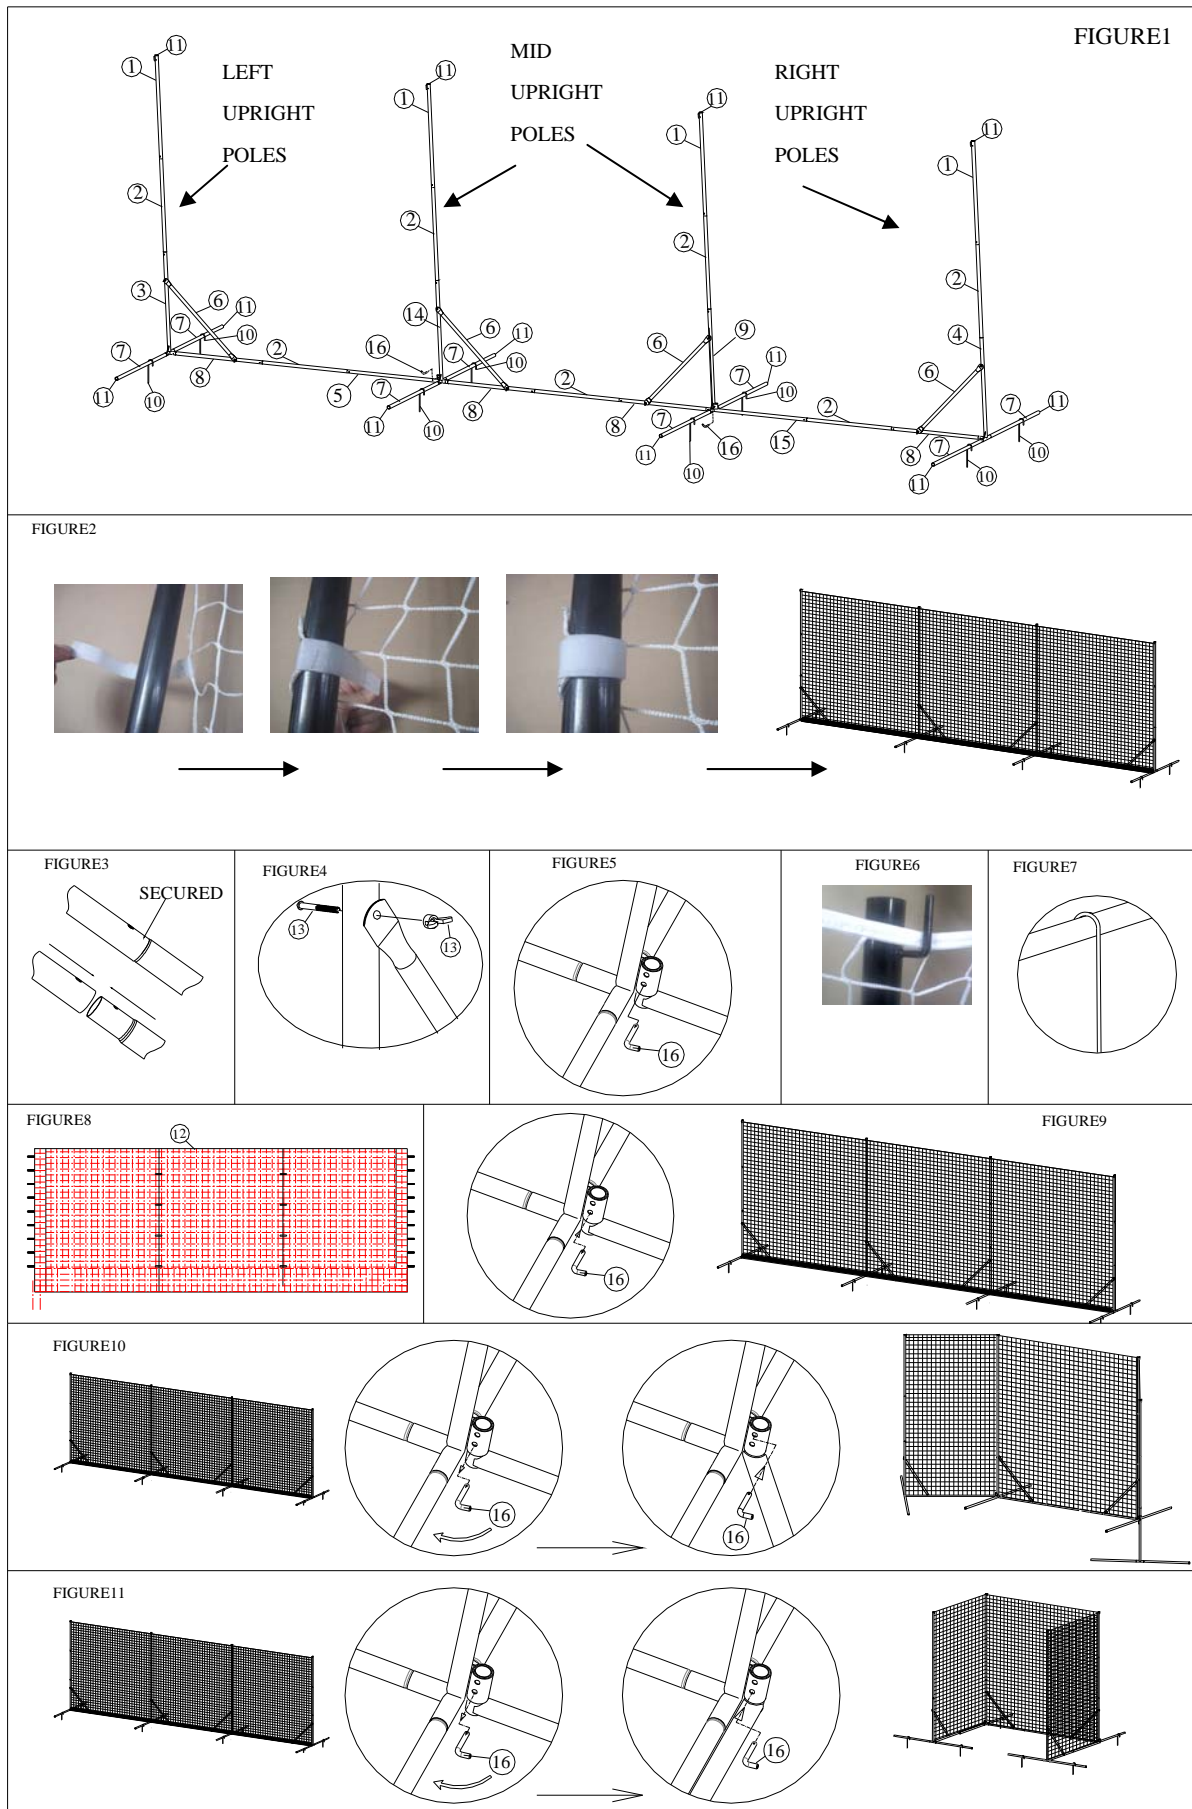



Style Number: PRD00205 10'x30' Backstop

Assemble frame as shown in **Figure 1**. Please note that all tubes are numbered according to **Figure 1** and parts list. Make sure you pick the correct number tube for assembling. During assembly, be sure that all snap buttons are secure as seen in **Figure 3**. To start, please leave all hardware in a hand tightened position until the frame is complete. Once the Backstop is fully constructed go back and secure all hardware.

Follow the steps below to assemble the bottom frame. Please reference **Figure 1** for further clarification.

1. Connect two Part #7's to Part #3.
2. Connect Part #8 to Part #3.
3. Connect Part #6 to Part #3 and #8 using two Butterfly Nut and Bolt sets, Part #13, per **Figure 4**.
4. Connect Part #2 to Part #8.
5. Connect Part #5 to Part #2.
6. Connect Part #14 to Part #5.
7. Connect two Part #7's to Part #14
8. Connect Part #8 to Part #14.
9. Connect Part #6 to Part #14 and #8 using two Butterfly Nut and Bolt sets, Part #13, per **Figure 4**.
10. Connect Part #2 to Part #8.
11. Connect Part #8 to Part #2.
12. Connect Part #9 to Part #8.
13. Connect two Part #7's to Part #9.
14. Connect Part #6 to Part #9 and #8 using two Butterfly Nut and Bolt sets, Part #13, per **Figure 4**.
15. Connect Part #15 to Part #9.
16. Connect Part #2 to Part #15.
17. Connect Part #8 to Part #2.
18. Connect Part #4 to Part #8.
19. Connect two Part #7's to Part #4.
20. Connect Part #6 to Part #4 and #8 using two Butterfly Nut and Bolt sets, Part #13, per **Figure 4**.
21. Layout the net, Part #12, per **Figure 8**.
22. Connect Part #1 to Part #2. Secure the left end of the net/net ties to Part #1 and #2 poles per **Figure 2**. Make sure that the top of the net is hooked on to the hook on Part #1, per **Figure 6**.
23. Repeat step 22 for right upright poles.
24. Repeat step 22 for the two mid upright Poles.
25. Connect left most upright poles, Part #1 and #2 with the net tied, to the left Part #3.
26. Repeat step 25 for other three upright poles and connect to Part #3, #9, and #14 accordingly per **Figure 1**.
27. Tie the bottom of the Net, Part #12, zip ties to each of the bottom poles, Part #3, #4, 9, and #14.
28. Place one Ground J-hook one each of Part #7 per **Figure 7 and 9**.
29. Check the assembly against illustrations and tighten all nuts and bolts securely.

Note: Please note that the net can be adjusted three different angles.

- a. 0 degrees per figure 9.
- b. 45 degrees per figure 10.
- c. 90 degrees per figure 11.



Limited Warranty

Limited Warranty

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the Company.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS LIMITED WARRANTY, DICK'S SPORTING GOODS, INC. MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCT.

Material Covered

Except as detailed below, this Limited Warranty covers defects in materials and workmanship. This Limited Warranty is void if the Product is:

- ° Damaged through improper use, negligence, abuse, misuse, transportation, damage, acts of nature, or accident, to include failure to follow the assembly and or operating instructions supplied with the product.
- ° Used in commercial or rental applications.
- ° Modified or repaired by anyone not authorized by the Company.

Material Not Covered

This Limited Warranty does not cover expendable items including but not limited to: Batteries, light bulbs, fuses, accessories, and other items that experience wear as a result of normal use.

Terms of Coverage

If during the one year LIMITED WARRANTY period, the Company deems any part or component of the Product to be defective, the Company will repair the Product without charge, or at the option of the Company, will replace the Product with new product, either the same or an equivalent item.

The Company's liability is limited to the repair or replacement, at its option of any defective product.

THE COMPANY ASSUMES NO RESPONSIBILITY NOR LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND.

THIS LIMITED WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS OTHERWISE PROVIDED BY APPLICABLE LAW.

Please direct all Product inquiries to:

Dick's Sporting Goods, Inc.
345 Court Street
Coraopolis, PA 15108
Customer Service
1 866 677 4771
customer.service@dcs.com