





**⚠ WARNING**

To avoid injury during assembly, disassembly, use, adjustment, and/or movement of the adjustable defender, the following **MUST** be observed:

1. Extreme caution should always be exercised when assembling, disassembling, using, adjusting, moving or locating the adjustable defender.
2. The adjustable defender is designed to repel sport balls only.
3. Do not climb, swing, jump, or walk on any part of the adjustable defender.
4. Keep away from heat sources and out of inclement weather.
5. The adjustable defender should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
6. Adult supervision is required.


PARTS LIST:

#	DESCRIPTION	PHOTO	QUANTITY
1	Adjustable Defender Net		1
2	Base Supports		2
3	Base Crossbar		1
4	Pole A		2

<p>5</p>	<p>Pole B</p> 		<p>2</p>
<p>6</p>	<p>Tethered Poles</p> 		<p>2</p>
<p>7</p>	<p>Bag</p>		<p>1</p>
<p>8</p>	<p>Stake</p>		<p>4</p>

ASSEMBLY INSTRUCTIONS:

- 1) Unfold the adjustable defender net, and group the remaining parts.

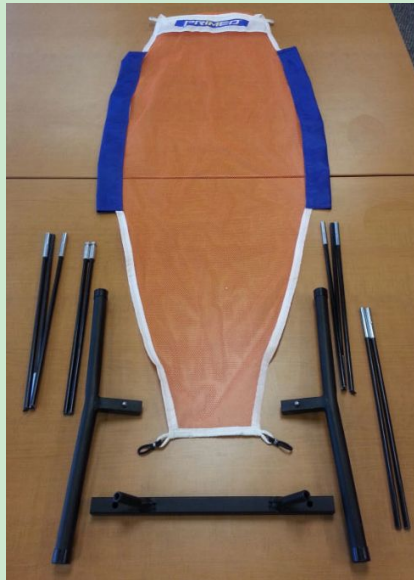

- 2) Connect the support base legs to the support crossbar.




- 3) Push down on silver buttons, and slide the support legs into the support crossbar until the silver button emerges securely through the support crossbar.



- 4) Slide the tethered poles down the blue sleeves located on the sides of the defender net, and secure them into the support crossbar ports located on the support crossbar.



- 5) Wrap the black loops at the bottom of the adjustable defender netting through the hooks on the support crossbar.

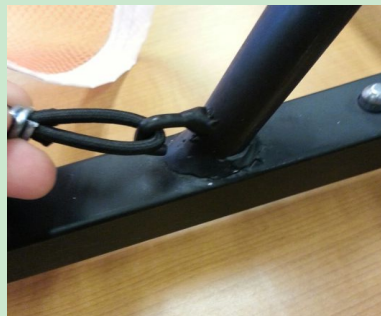

- 6) Skip to **step 11** to set up the adjustable defender at **6'5**. Continue to **step 8** to set the adjustable defender at **5'**.
- 7) Insert poles A into the top of the tethered poles that run through the blue sleeves of the adjustable defender.



- 8) Roll the excess adjustable defender netting as needed from top to bottom, ensuring a snug fit. Secure the white loops at the top of the adjustable defender netting around the silver grooves at the top of poles A.



- 9) Place remaining poles B inside the blue sleeve pockets, located on the blue sleeve.

- 10) Your adjustable defender, standing at 5', is now complete.



- 11) Unravel the extended 6'5" top of the adjustable defender netting.



12) Insert poles B through the white **middle** loops of the adjustable defender netting, and into the top of the tethered poles that run through the blue sleeves of the adjustable defender.



13) Insert poles A through the **top** white loops of the adjustable defender netting, down into the top ports of poles B.



14) Wrap the top white loops of the adjustable defender securely around the silver grooves of poles A.



15) Slide the adjustable net up and down as needed for a snug fit from top to bottom. Your adjustable defender, standing at 6'5", is now complete.





Limited Warranty

Limited Warranty

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the Company.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS LIMITED WARRANTY, DICK'S SPORTING GOODS, INC. MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCT.

Material Covered

Except as detailed below, this Limited Warranty covers defects in materials and workmanship. This Limited Warranty is void if the Product is:

- ° Damaged through improper use, negligence, abuse, misuse, transportation, damage, acts of nature, or accident, to include failure to follow the assembly and/or operating instructions supplied with the product.
- ° Used in commercial or rental applications.
- ° Modified or repaired by anyone not authorized by the Company.

Material Not Covered

This Limited Warranty does not cover expendable items including but not limited to: Batteries, light bulbs, fuses, accessories, and other items that experience wear as a result of normal use.

Terms of Coverage

If during the one year LIMITED WARRANTY period, the Company deems any part or component of the Product to be defective, the Company will repair the Product without charge, or at the option of the Company, will replace the Product with new product, either the same or an equivalent item.

The Company's liability is limited to the repair or replacement, at its option of any defective product.

THE COMPANY ASSUMES NO RESPONSIBILITY NOR LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND.

THIS LIMITED WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS OTHERWISE PROVIDED BY APPLICABLE LAW.

Please direct all Product inquiries to:

Dick's Sporting Goods, Inc.
345 Court Street
Coraopolis, PA 15108
Customer Service
1 866 677 4771
customer.service@dcs.com