

**⚠ WARNING**







To avoid injury during assembly, disassembly, use, adjustment, and/or movement of the Primed rebounder, the following **MUST** be observed:






1. Extreme caution should always be exercised when assembling, disassembling, using, adjusting, moving or locating the Primed Rebounder.
2. The Primed Rebounder is designed to rebound sport balls only.
3. Do not climb, swing, jump, or walk on any part of the Primed Rebounder.
4. Keep the Primed Rebounder away from heat sources and out of inclement weather.
5. The Primed Rebounder should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
6. Adult supervision is required.
7. Small parts are a choking hazard for children.

**WARNING:**

CHOKING HAZARD--Small parts
Not for children under 3 yrs.

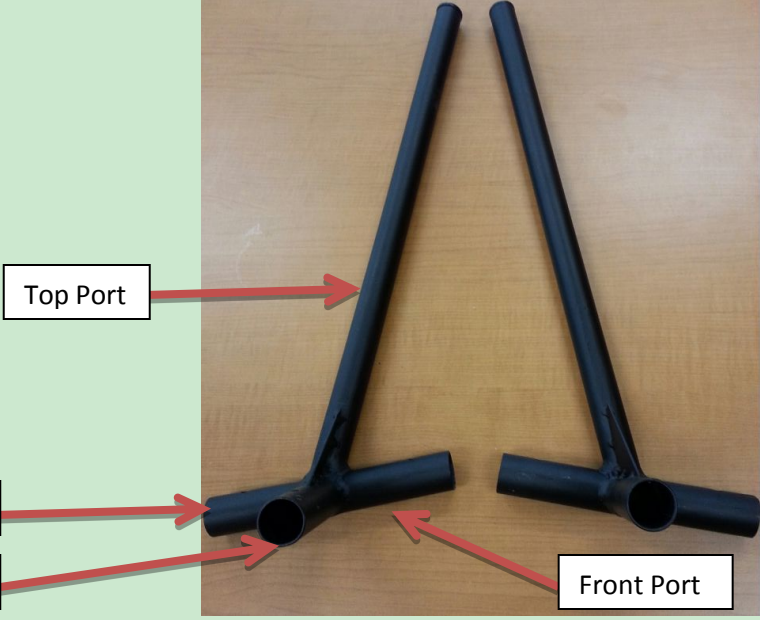PARTS LIST:

#	DESCRIPTION	PHOTO	QUANTITY
1	Rebounder Net		1
2	Front Legs		2
3	Back Legs		2
4	Pole A 		2
5	Pole B 		2

<p>6</p>	<p>T Supports</p>		<p>2</p>
<p>7</p>	<p>Bungees</p>		<p>24</p>
<p>8</p>	<p>Center Crossbars (No rubber ends)</p>		<p>2</p>
<p>9</p>	<p>Steel Anchors</p>		<p>4</p>
<p>10</p>	<p>Bag</p>		<p>1</p>

ASSEMBLY INSTRUCTIONS:


- 1) Unfold the adjustable defender net, and group the remaining parts.




- 2) Connect the two center cross bars by pressing down on the silver button, and sliding them together until the silver button emerges securely through both center crossbars. Please note: for increased stability, the crossbars are designed at an angle so that the middle is elevated slightly off the ground, and the ends going into the T supports are on the ground.



- 3) Connect the front legs, which are smaller than the back legs, to the bottom front port of the T supports. Press down on the silver button on the front leg, and insert it into the T support until the silver button emerges securely through the T support. Do this for both sides.

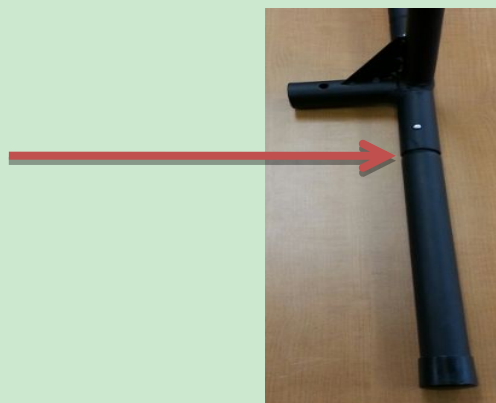

- 4) Connect the back legs, which are longer than the front legs, to the back port available on the T support by pressing down on the silver buttons, and inserting them until they securely emerge through the T support. Do this for both sides. At this point, the middle port should still be open.

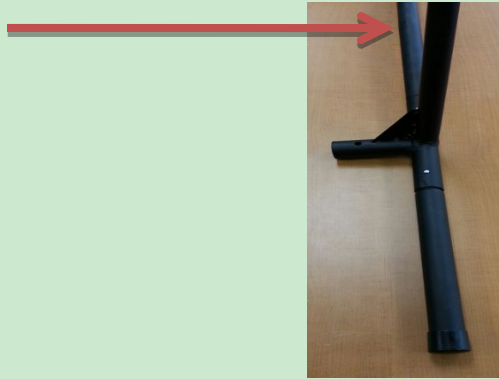

- 5) Connect the center cross bars to the middle ports available the T support by pressing down on the silver button, and inserting them until they securely emerge through the T support. Do this on both sides.



- 6) Insert poles A into the top port of the metal opening on the base. Do this for both sides.



- 7) Insert poles B into the top of poles A. Ensure the black grooved end of poles B remains on top. Do this for both sides.



- 8) Attach the Primed Rebounder netting by wrapping the white loops located at the top corner of the Primed Rebounder netting securely around the black grooves located at the top of poles B.



- 9) Wrap the bungee cords evenly around the border of the rebounder netting to poles A, poles B, the existing arms, and the center crossbars. Attach 8 bungee cords to the left side, 8 bungee cords to the right side, and 4 on each crossbar. Ensure the netting fits evenly around all borders.



- 10) Apply steel anchors around the crossbars or legs as needed to secure your Primed Rebounder to your playing surface.

- 11) Your Primed Rebounder is now ready for the field!



Limited Warranty

Limited Warranty

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the Company.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS LIMITED WARRANTY, DICK'S SPORTING GOODS, INC. MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCT.

Material Covered

Except as detailed below, this Limited Warranty covers defects in materials and workmanship. This Limited Warranty is void if the Product is:

- ° Damaged through improper use, negligence, abuse, misuse, transportation, damage, acts of nature, or accident, to include failure to follow the assembly and/or operating instructions supplied with the product.
- ° Used in commercial or rental applications.
- ° Modified or repaired by anyone not authorized by the Company.

Material Not Covered

This Limited Warranty does not cover expendable items including but not limited to: Batteries, light bulbs, fuses, accessories, and other items that experience wear as a result of normal use.

Terms of Coverage

If during the one year LIMITED WARRANTY period, the Company deems any part or component of the Product to be defective, the Company will repair the Product without charge, or at the option of the Company, will replace the Product with new product, either the same or an equivalent item.

The Company's liability is limited to the repair or replacement, at its option of any defective product.

THE COMPANY ASSUMES NO RESPONSIBILITY NOR LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND.

THIS LIMITED WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS OTHERWISE PROVIDED BY APPLICABLE LAW.

Please direct all Product inquiries to:

Dick's Sporting Goods, Inc.
345 Court Street
Coraopolis, PA 15108
Customer Service
1 866 677 4771
customer.service@dcs.com