



WARNING

To avoid injury during assembly, disassembly, use, adjustment and/or movement of the PRIMED Knee Hockey Set, the following warnings MUST be observed at all times:

- Adult assembly (1 adult) required for assembly, disassembly, adjusting and moving the PRIMED Knee Hockey Set.
- Adult supervision during use is recommended.
- Extreme caution should ALWAYS be exercised when assembling, disassembling, using, adjusting, moving or locating the PRIMED Knee Hockey Set.
- The PRIMED Knee Hockey Set should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
- Do not leave the PRIMED Knee Hockey Set outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds.
- To extend the life of the product, unit should be folded and stored indoors when not in use.
- Ensure all components are properly assembled prior to use. Examine your PRIMED Knee Hockey Set regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
- Keep away from fire and heat sources.



WARNING:

**CHOKING HAZARD--Small parts
Not for children under 3 yrs.**

- Unassembled parts, sticks and ball may be a choking hazard for children 3 years and younger. Adult assembly is required.
- Children should not put arms, head or other body parts in holes in net. Entrapment and/or strangulation can occur.
- Failure to follow the above mentioned Warnings may result in serious injury.

CAUTION: Goal is under tension. Exercise caution when opening and folding.

PACKAGE CONTENTS

PART NO.	Image		
		Description.	Q' TY
1		Bag	1
2		Frame and Net	2
3		Sticks	2
4		Ball	1

ASSEMBLY

PRIMED Knee Hockey Set is completely assembled when purchased. It is important that user uses following steps for setting up and folding the goal.

Please follow the following steps to setting up the goals:

1. Take the goal out of the bag and hold it per below picture. Open hook n' loop strap to release the goals – use caution when performing this as the goal is under extreme tension.



2. Taking one net at a time CAREFULLY untwist net per photos below.



3. Adjust the goal per below picture for proper use. If desired unfold second net using steps one and two above.



DISSASSEMBLY

PRIMED Knee Hockey Goals can be folded twice. Please follow the following pictures steps to fold the goals.

1. Take the goal per below pictures and fold it from two opposite corners creating two triangles.



2. Fold the two triangles together so that all corners are aligned and the goal is flat. Use hook n' loop strap to securely hold the goals closed after folding and before inserting them back into the carrying bag



1. Goal is ready to place to into the bag for storage.

**Limited Warranty**

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the Company.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS LIMITED WARRANTY, DICK'S SPORTING GOODS, INC. MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCT.

Material Covered

Except as detailed below, this Limited Warranty covers defects in materials and workmanship. This Limited Warranty is void if the Product is:

- ° Damaged through improper use, negligence, abuse, misuse, transportation, damage, acts of nature, or accident, to include failure to follow the assembly and/or operating instructions supplied with the product.
- ° Used in commercial or rental applications.
- ° Modified or repaired by anyone not authorized by the Company.

Material Not Covered

This Limited Warranty does not cover expendable items including but not limited to: Batteries, light bulbs, fuses, accessories, and other items that experience wear as a result of normal use.

Terms of Coverage

If during the one year LIMITED WARRANTY period, the Company deems any part or component of the Product to be defective, the Company will repair the Product without charge, or at the option of the Company, will replace the Product with new product, either the same or an equivalent item.

The Company's liability is limited to the repair or replacement, at its option of any defective product. **THE COMPANY ASSUMES NO RESPONSIBILITY NOR LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND.**

THIS LIMITED WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS OTHERWISE PROVIDED BY APPLICABLE LAW.

Please direct all Product inquiries to:

Dick's Sporting Goods, Inc.
345 Court Street
Coraopolis, PA 15108
Customer Service
1 866 677 4771
customer.service@dcs.com