









⚠ WARNING

To avoid injury during assembly, disassembly, use, adjustment, and/or movement of the PRIMED 72" Instant Hockey Net, the following five warnings **MUST** be observed:

1. Keep fingers away from all hinges and joints.
2. Goal to be used with hockey balls only.
3. DO NOT climb or swing on any part of the net/goal.
4. Adult supervision is required.
5. Goal must be held down with weights (sand bags recommended).

PARTS LIST:

#	DESCRIPTION	PHOTO	QUANTITY
1	PRIMED Carry Bag		1
2	Hockey Goal (Goal will come collapsed)		1
3	Pole A (16mm Poles)  16mm		2
4	Pole B (12.7mm Poles)  12.7mm		2

ASSEMBLY INSTRUCTIONS:

- 1) Remove the collapsed goal from the carry bag.



- 2) Unfold each of the goals curved arms half way. **DO NOT** lock the push pins into place yet.



- 3) Run pole A (16mm) through the red sleeve and place it into the front pole port at the base of the goal. Repeat this step with the second pole A on the other side. Once poles are sleeved and in place, secure the loops over the top of each pole A.



- 4) Pull the curved arms all the way out and lock the push pins into to final playing position.



- 5) Place pole B (12.7mm) into the pole port located at the back of the base. Repeat this step with the second pole B on the other side.



- 6) Secure the rear loops of the net over the top of each pole B.



- 7) Place the goal in your desired location and shoot away!



Limited Warranty

Limited Warranty

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials under normal use and conditions for a period of ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. This Limited Warranty is not transferable and is available only for the original purchaser of the Product. The Company's obligation under this warranty is limited to replacing or repairing the Product, at the discretion of the Company.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS LIMITED WARRANTY, DICK'S SPORTING GOODS, INC. MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCT.

Material Covered

Except as detailed below, this Limited Warranty covers defects in materials and workmanship. This Limited Warranty is void if the Product is:

- ° Damaged through improper use, negligence, abuse, misuse, transportation, damage, acts of nature, or accident, to include failure to follow the assembly and or operating instructions supplied with the product.
- ° Used in commercial or rental applications.
- ° Modified or repaired by anyone not authorized by the Company.

Material Not Covered

This Limited Warranty does not cover expendable items including but not limited to: Batteries, light bulbs, fuses, accessories, and other items that experience wear as a result of normal use.

Terms of Coverage

If during the one year LIMITED WARRANTY period, the Company deems any part or component of the Product to be defective, the Company will repair the Product without charge, or at the option of the Company, will replace the Product with new product, either the same or an equivalent item.

The Company's liability is limited to the repair or replacement, at its option of any defective product.

THE COMPANY ASSUMES NO RESPONSIBILITY NOR LIABILITY FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND.

THIS LIMITED WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS OTHERWISE PROVIDED BY APPLICABLE LAW.

Please direct all Product inquiries to:

Dick's Sporting Goods, Inc.
345 Court Street
Coraopolis, PA 15108
Customer Service
1 866 677 4771
customer.service@dcs.com